

MAINTENANCE OF HANDMADE CONCRETE FURNITURE



FEATURES

Snoc concrete products are made from a specially designed concrete mixture. They are resistant to harsh weather conditions and have a non-porous nature with small pores.

MAINTENANCE AND REPAIR

Cleaning stained areas:

- We recommend using a non-abrasive cleaner.
- Spray the cleaner onto the surface and let it sit for 2-3 minutes, then wipe it off with a sponge or soft cloth.
- For additional protection and polishing, we recommend using a concrete-specific sealant.

MAINTENANCE OF HANDMADE CONCRETE FURNITURE

Comprehensive cleaning:

- Mix warm water with a mild soap and clean with a sponge or a soft cloth.
- It is strongly recommended not to use abrasive cleaners.
- After the washing process is complete, rinse with water and dry with a soft cloth.
- High-pressure washing at 83 bar (1200 PSI) is also effective. Keep the pressure washer about 30 cm away from the furniture

ÖNERİLER

- Avoid placing or dragging sharp or hard objects along the surface to prevent scratches.
- Avoid contact with acidic substances that can damage the surface.
- We do not recommend using cleaning products that are typically highly acidic or most natural cleaners. Citrus-based cleaners should not be used.
- Do not use cleaning products that contain acetone or denatured alcohol.
- Avoid using abrasive or ammonia-based cleaners.
- We always recommend using coasters or placemats.
- Use felt pads on the bottoms of objects that will remain on the tabletop for an extended period. This is especially important for natural stone materials or products containing moisture.
- Quickly wipe up spills to prevent staining.
- Our outdoor furniture covers will help protect against external elements.



OUTDOOR FURNITURE COVER GUIDE

MAINTENANCE

Outdoor furniture should be covered when not in use, to protect it from external elements. Before placing the protective cover on the furniture, clean the surface by rinsing it with a hose and drying it with a soft cloth. Ensure that no residue is left on the surface, as it can lead to mold formation over time. During the use of the protective cover, clean any accumulated dirt or residue on the cover's surface once a month. Use a soft-bristle brush, cold or lukewarm water, and a mild, natural soap cleaning solution for your furniture. Avoid using chemical detergents.

Allow the furniture to air dry only.

HOW TO USE?

- Thoroughly clean all furniture and cushions before storage. Allow the furniture to completely dry before storage.
- Cushions should be stored in a dry place when not in use for an extended period or during the off-season. Cushions should be completely clean and dry before storage
- If storing cushions is not possible, lay them flat on the seat before covering. This ensures that the cover fits properly.
- Place the cover over the furniture; the protective covers are specially designed to fit the shape of each furniture piece. Ensure that the cover is fitted according to the shape of the furniture.
- For sections, arrange the furniture as you would normally and place each protective cover over the appropriate piece; secure the cover by pulling the pins located at the bottom to ensure complete coverage.

PROTECTIVE COVER FEATURES

To ensure the long-term health and durability of your outdoor furniture, we strongly recommend covering them with protective covers during the off-season. Prior to covering, it is important to thoroughly clean and fully dry your furniture to prevent mold during storage. Please refer to our care documentation for detailed furniture cleaning instructions for each material type.


Our specially designed covers for outdoor furniture offer superior performance and are made from highly durable, breathable, stain-resistant fabric that is resistant to mold, tearing, and fading. They are the industry's choice for protecting furniture from dust, dirt, harsh UV rays, and challenging weather conditions.

- It is highly compatible with our outdoor furniture collections.
- It is made of durable 100% solution-dyed polyester fabric.
- The breathable fabric is resistant to mold and mildew
- It is resistant to shrinkage, fading, UV rays, and harsh weather conditions.
- It maintains its shape without tearing or stretching.
- The fabric is suitable for all weather conditions and is water-resistant.

OUTDOOR FURNITURE COVER GUIDE

TENT ELEVATION

To prevent water from pooling on the product, a tent elevation is created. This allows for proper water drainage and ensures that water flows away from the surface.

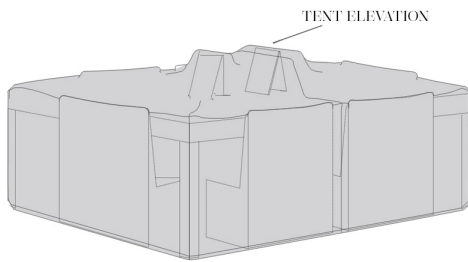

FREQUENTLY ASKED QUESTIONS

WHAT TYPE OF FABRIC IS USED ON SNOC FURNITURE COVERS?

SNOC uses highly durable, breathable, stain-resistant fabric that is resistant to water, mold, tearing, and fading, protecting the furniture from dust and dirt, harsh ultraviolet rays, and challenging weather conditions.

HOW CAN I USE MY SNOC FURNITURE COVER?

Before covering the furniture with the protection cover, make sure to clean and dry the frame and cushions thoroughly.

- Whenever possible, remove the cushions to prevent mold issues in humid environments. However, SNOC protection covers are designed to accommodate cushions within the cover. Place the back cushions flat on the seat cushion(s). If storing the cushions separately, clean and dry them appropriately before covering.
- If your furniture has back cushions, place them flat on top of the seat cushions before fitting the cover. This will ensure a proper fit of the protection cover.
- If your protective cover is for a dining table set, make sure that all the chairs are pushed in as much as possible before putting on the cover.
- For dining tables, coffee tables, and side tables, it is recommended to place a tall accessory such as a vase, which will prevent water from pooling and allow it to flow downward, before fitting the cover.
- Place the covers over the furniture. If your cover has a zipper, open it before placing it over the furniture and then zip it closed securely. Fasten the cords underneath the protection cover by pulling them from both ends.



OUTDOOR FURNITURE COVER GUIDE

WHAT SHOULD I DO IF MY COVER DOES NOT FIT PROPERLY?

- Check the label on the front of the cover to ensure that it is placed correctly on the intended product.
- If your furniture has back cushions, place them flat on top of the seat cushions before fitting the cover. This will help the cover to fit properly.
- If your cover has a zipper, make sure it is open. This will make it easier for the cover to pass over the frame.
- If your cover came with tent supports, ensure that they are upright and placed against the flat surface of the product. If none of the above steps help, contact SNOC Customer Service at 0850 800 6464 for assistance.

WHAT SHOULD I DO IF WATER IS COLLECTING IN MY COVER?

- Ensure that all tent supports provided are in an upright position and placed against the flat surface of the product.
- Make sure that all back cushions are placed flat on top of the seat cushions. The cover is designed to help water flow by placing the cushions flat.
- Ensure that the cover is pulled down as much as possible to prevent any sagging that may cause water pooling. Tighten the cords to keep the cover taut and in place.
- Check the label on the front of the cover to ensure that it is the correct fit for the product's frame. If none of the above steps help, contact SNOC Customer Service at 0850 800 64 64 for assistance.